



EXTERIOR DOOR SOLUTIONS

EXTERIOR DOOR DRAIN DETAIL STEP DOWN LANDING – PREFERRED OPTION

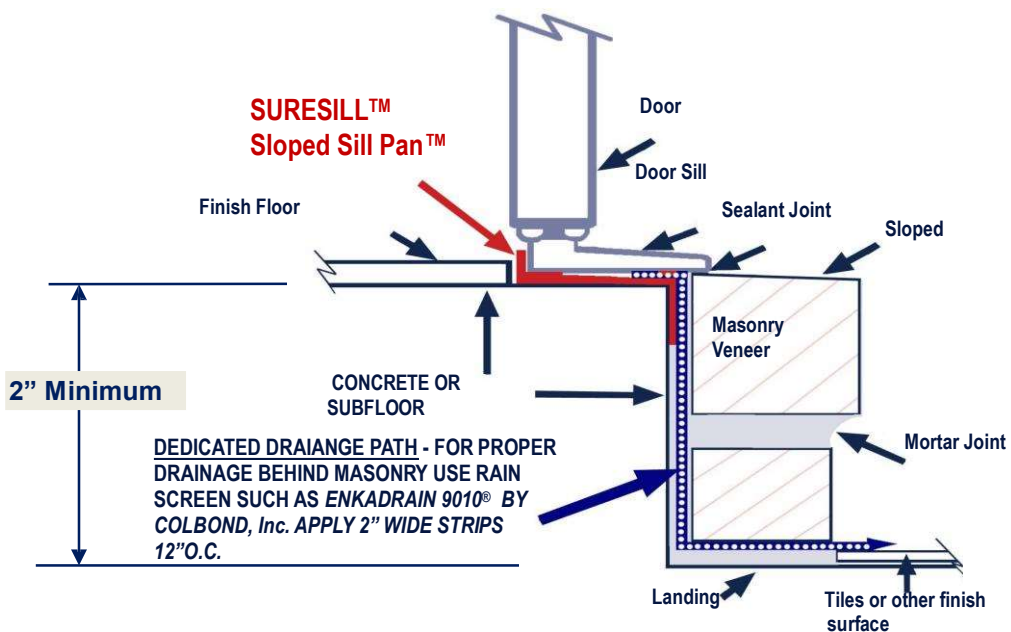


Fig. 1 EXTERIOR DOOR WITH STEP-DOWN LANDING With Masonry Veneer - Door Drain Detail

Step Down Landing should be minimum 2".

Install SureSill™ System per SureSill Water Management Guide

Instead of Masonry Veneer, other exterior cladding can be installed, such as Stucco, Siding, etc., however, a Dedicated Drainage Path proper drainage should always be installed.

CONTINUOUS SLAB (ON-GRADE) EXTERIOR DOOR DRAIN DETAIL INCLUDING ADA DOORS

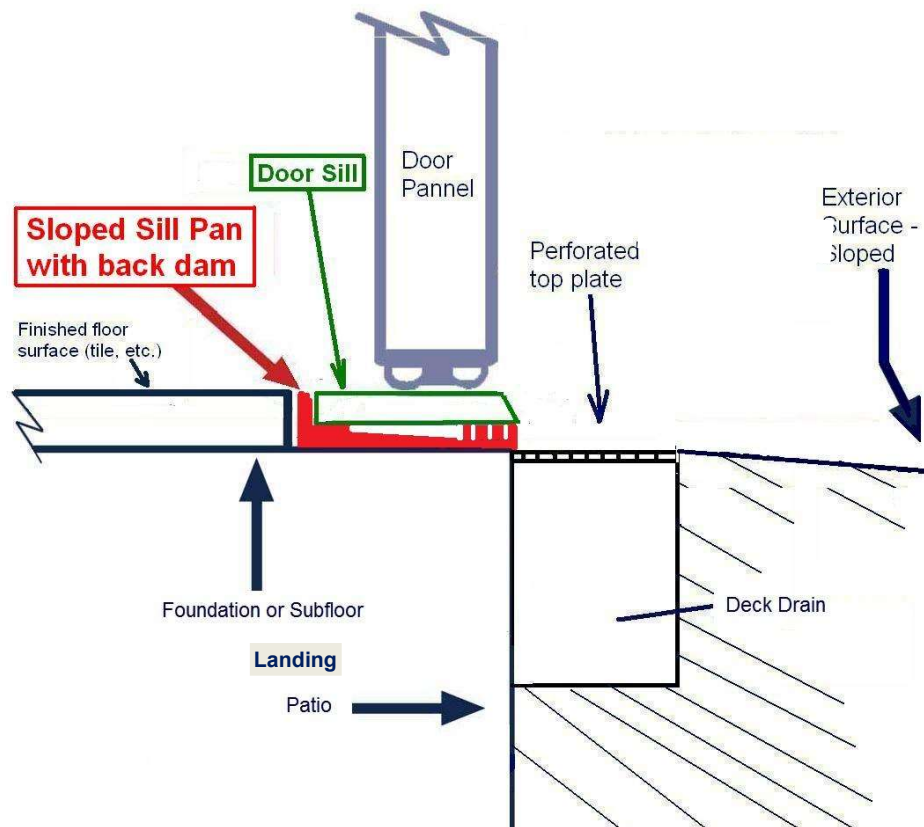


Fig. 2 CONTINUOUS SLAB EXTERIOR DOOR DRAIN DETAIL

Deck Drain should be installed to evacuate the water with an open end away from the building.

Exterior Surface should slope away from the building. Install SureSill™ System per SureSill Water Management Guide

Recommended products for Deck Drain: *Super Drain by Stegmeier Corporation*

http://www.stegmeier.com/index.php?option=com_content&view=article&id=83&Itemid=111